

Quick, uniform distribution of heat to all radiation is the first essential to perfect performance. This requires balancing the radiation by controlled venting. Vent-Rite's #1 non-vacuum vents are adjustable, and all vents are designed for positive action and straight-line venting. They function automatically to vent the air. If, through an unusual condition, the vent is filled with water, the vent port automatically closes.

### Vent-Rite Valve Specifications

<u>Vent</u>	<u>Used For</u>	<u>Connection</u>	<u>Vent Port</u>	<u>Operating Pressure</u>	<u>Height</u>	<u>Adjustable</u>
I	Free Standing Radiators	1/8" Male	3/32"	3 PSI	3 1/4"	Yes
II	Free Standing Radiators	1/8" Male	1/16"	6 PSI	2 3/4"	No
31	Convectors & Risers	1/8" Male	1/16"	6 PSI	3 3/4"	No
33	Convectors & Risers	1/4" Male	1/16"	6 PSI	3 3/4"	No
35	Main Vents	3/4" Male x 1/2" Female	3/32"	3 PSI	3 1/4"	No

**Notes:** Operating pressure (drop away) is the maximum pressure at which the vent will continue to open and close due to the change in temperature. The vent may be used with slightly higher pressure, providing it drops below the operating pressure between each firing cycle. The #57 vent also reduces damage caused by the water hammer.

### Replacement Guide

<u>Vent-Rite</u>	<u>Dole</u>	<u>Hoffman</u>
I	IA	IA
II	1933	40
31	3A	41
33	3B	43
35	4	45

### Vent-Rite Features



*Every Vent-Rite vent is factory-assembled, tested & inspected in the USA!*

*Each valve is individually packaged with external labeling for convenience & maintenance.*

*All brass internals with nickel plated & hand polished exterior.*

*Adjustable vents have wide adjustment conveniently located below the steam path.*